

Installation Notes

You will need a professional grade applicator gun with a ratio of 18:1



- Cut the nozzle to a 5mm diameter hole
- The substrate must be sound, clean and free of contaminants or loose material
- Product is suitable for exterior applications even in wet conditions
- Always check the bond prior to allowing traffic into the area
- **This product is not suitable for use on Asphalt or bitumen substrates**



Any spills or excess adhesive should be removed using
Rewmar
Hand & Tool wipes


Tel: 0333 800 1966



Stair Nosing Fitting Guide



Check the step measurement and trim nosing to size if required. Prepare step edge surfaces to ensure that the substrate is sound, clean and free of contaminants or loose material

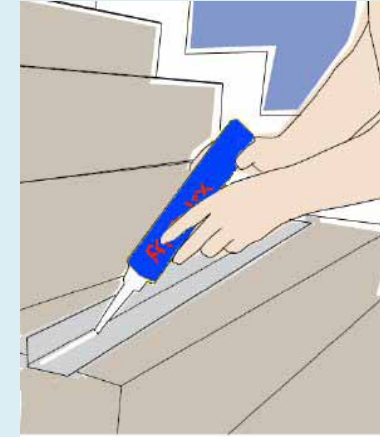


Apply the adhesive to the underside of the profile in a 5mm wide bead beginning 5mm in from the outer edge of the profile. Apply the next 5mm bead of adhesive approximately down the middle of the profile (See figure 1 and 2)




Place the profile so that the leading edge is overlapping the edge of the step by 5mm and press down whilst sliding the profile into place. Press down firmly on the profile to ensure a full bond.




Allow 1 hour after fixing before opening the area to traffic. It is the contractor's responsibility to ensure the bond is secure before opening the area.

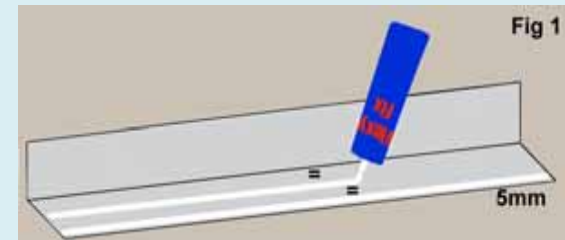

If the profile is single channel, 2 beads of adhesive will be sufficient (Fig 1)

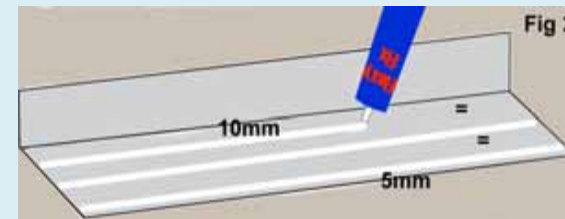

If the profile is double channel a further bead of adhesive will be required 10mm in from the inside edge (Fig 2)

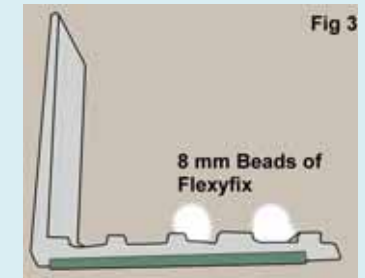

Fitting castellated (ridged) profiles may require 8mm beads of adhesive to ensure full adhesion (Fig 3)