

Rewmar



**Fast, clean and easy
to use adhesive.**



- No solvents
- Not water based
- No plasticiser migration
- Anti-fungal
- Fast cure time
- Waterproof seal

Designed for fixing:-

- Capping Strips
- Anti-slip Inserts
- Cove Formers
- Sit-on, Set-in or Flat Skirting

Suitable for:

- PVC, Aluminium, Metal or Wood

Rewmar



Changing the way you work

Coving

Coving can be fitted by applying one bead of adhesive to either the top or the bottom of the cove, depending on whether you stick it to the wall or the substrate.

Capping

Capping will usually only require one 3mm bead of adhesive which can be applied either to the capping itself or to the wall. The adhesive can be applied directly to the wall.



Skirting

PVC Skirting is available as either a Set-In or Sit-On profile.

For up to 100mm tall profiles, 3 x 3mm beads of adhesive should be suitable.

For Set-in profile apply 3 x 3mm beads on the upstand and 2 x 3mm beads on the 50mm Foot

For Set-in and Sit-on 150mm height profiles apply 4 x 3mm beads.

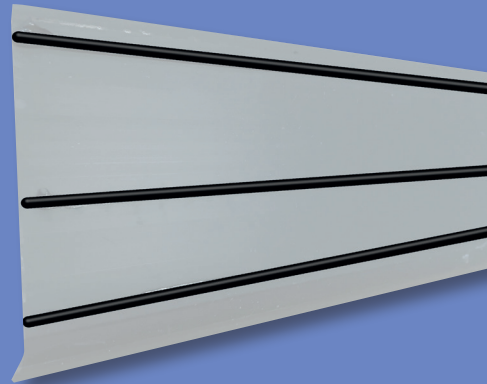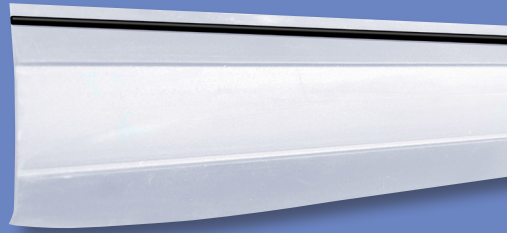

QUANTUM
FLOORINGSOLUTIONS



Part of the Rewmar family of adhesives

Rewmar

T: 0333 800 1966
E: sales@rewmar.co.uk
www.rewmar.co.uk